

THEOBEN A.W.T. AIR-ARMS SIDELEVERS

Sidelevers ONLY - Will not fit any new models i.e. TX200 or Prosport

Tools required to carry out conversion:

- 3/32 Allen Key
- Medium Slot Head Screwdriver
- Spring compressor


HELPLINE
01234 391429

These instructions are for a standard Air-Arms models (except TX200). If your gun has been modified in any contact Theoben Engineering before attempting a conversion.

1. Ensure gun is uncocked before stripping.
2. Remove two stock bolts.
3. Remove sidelever retaining pin.
4. Remove Allen grub screw.
5. Compress end block with spring compressor.
6. Remove Cross Pin carefully ensuring spring and plunger are not lost.
7. Remove coil spring.
8. Insert new spring as per diagram, twisting to ease fitment.
9. If end block is fitted with steel guide, cut to dimensions shown on diagram i.e. 7mm or 1/4".
10. Fit spring location block (supplied) as per diagram.
11. Replace End Block and Lever, compressing approximately 5mm or 3/16". Insert Cross Pin (with spring and plunger held in place with grease).

Available for;
Bora
Camargue
Firepower
Jackel
Khasmin
Mistral

Assembly is now a reversal of dismantling instructions

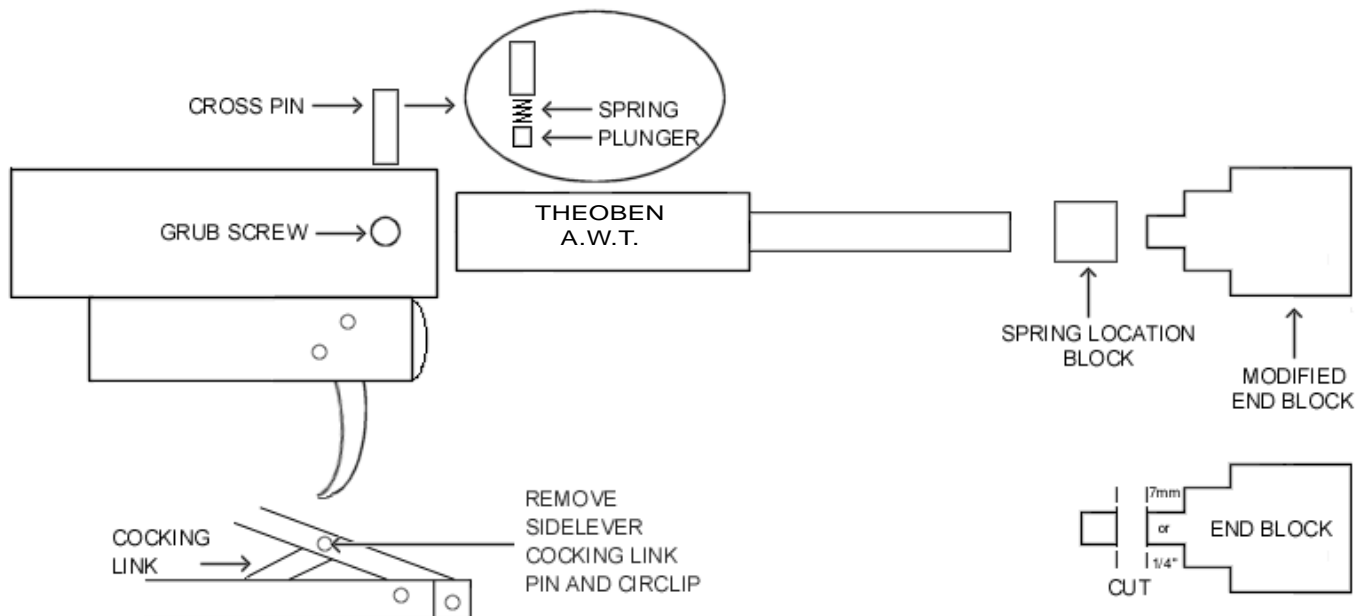

Gas Spring is guaranteed for 6 months from date of purchase.

No responsibility can be accepted for any damage caused by misfitting of gas spring.

Patent Warning Notice for Gas Strut

This Gas Strut Spring Kit is protected by the following patents; UK 2.084.704 USA 4.707.686 Belgium 897.043
Further patents pending.

