

THEOBEN A.W.T. WEBLEY ECLIPSE

Tools required to carry out conversion:

- Spring compressor
- Philips screwdriver
- Hacksaw
- Medium grade file

HELPLINE
01234 391429

1. Remove spring (as per Webley instructions)
2. Remove spigot from end block as per diagram and file end smooth.


Diagram A shows original block with separation line where spigot should be cut.

Diagram B shows length of spigot after it has been filed smooth (4mm).

Diagram C shows the block now ready for insertion into the gun. Ensure the block is clean before placing into gun.

3. Insert gas spring with rod to the REAR. If spring is a loose in the piston place a strip of masking tape (electricians tape) at each end of the body of the gas spring until a smooth firm fit is achieved.
4. Replace end block, compress and insert pin.
5. Replace stock.

There are no detrimental effects from prolonged cocking.

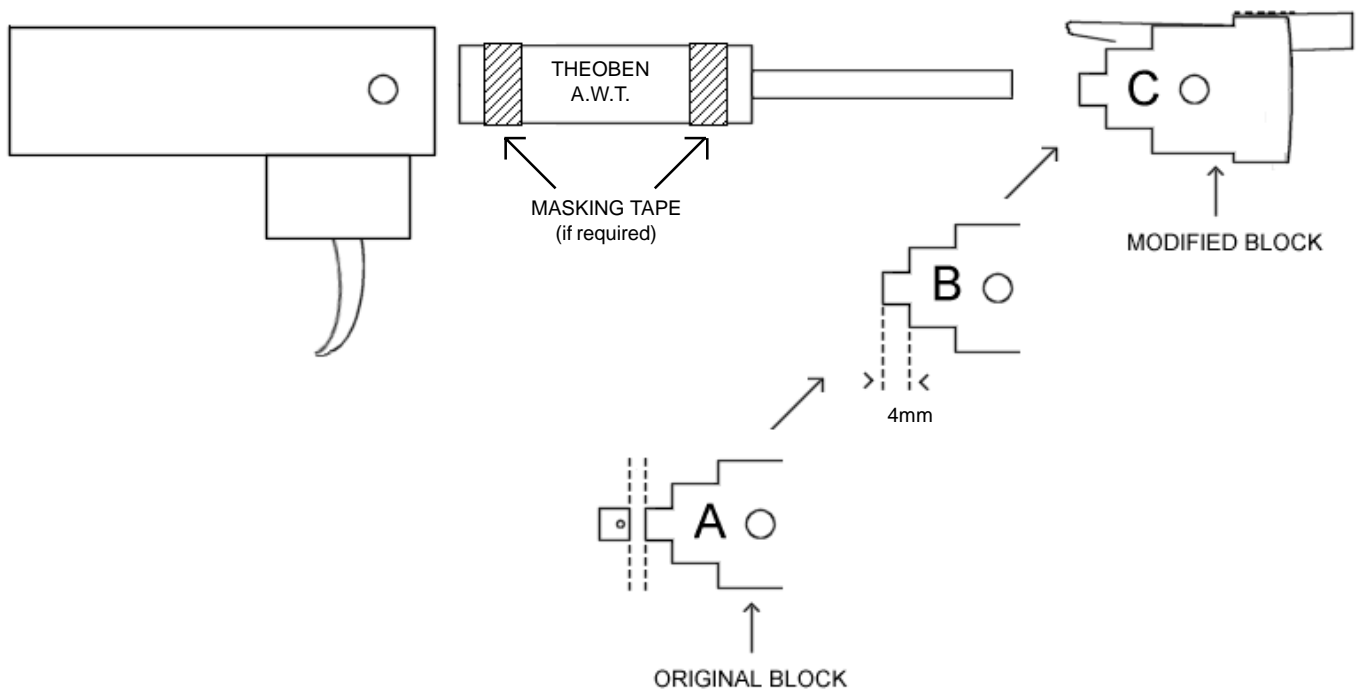

Gas Spring is guaranteed for 6 months from date of purchase.

No responsibility can be accepted for any damage caused by misfitting of gas spring.

Patent Warning Notice for Gas Strut

This Gas Strut Spring Kit is protected by the following patents; UK 2.084.704 USA 4.707.686 Belgium 897.043

Further patents pending.

