

THEOBEN A.W.T. WEBLEY TRACKER

Tools required to carry out conversion:


Spring compressor

Philips screwdriver

HELPLINE
01234 391429

1. Remove spring (as per Webley instructions). Ensure that the piston weight is removed.
2. Insert gas spring with rod to the REAR. If spring is a loose in the piston place a strip of masking tape (electricians tape) at each end of the body of the gas spring until a smooth firm fit is achieved.
3. Replace body end plug ensuring that damping disc is in place.
4. Compress and insert pin.
5. Replace stock.

There are no detrimental effects from prolonged cocking.

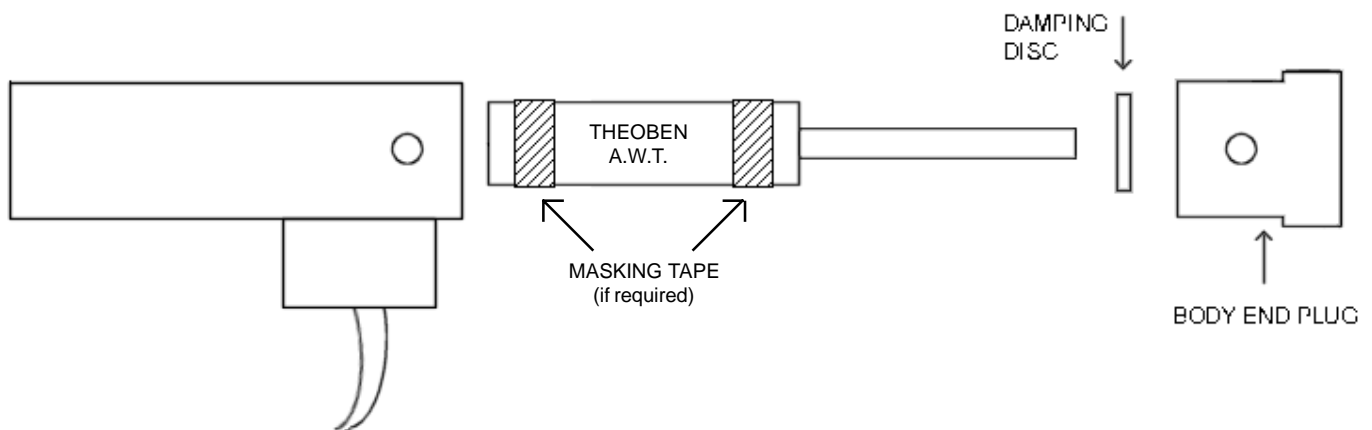

Gas Spring is guaranteed for 6 months from date of purchase.

No responsibility can be accepted for any damage caused by misfitting of gas spring.

Patent Warning Notice for Gas Strut

This Gas Strut Spring Kit is protected by the following patents; UK 2.084.704 USA 4.707.686 Belgium 897.043
Further patents pending.

